 




# Casio Exilim EX-Z850 LCD Screen Replacement

Replacing the LCD screen.

Written By: Christian

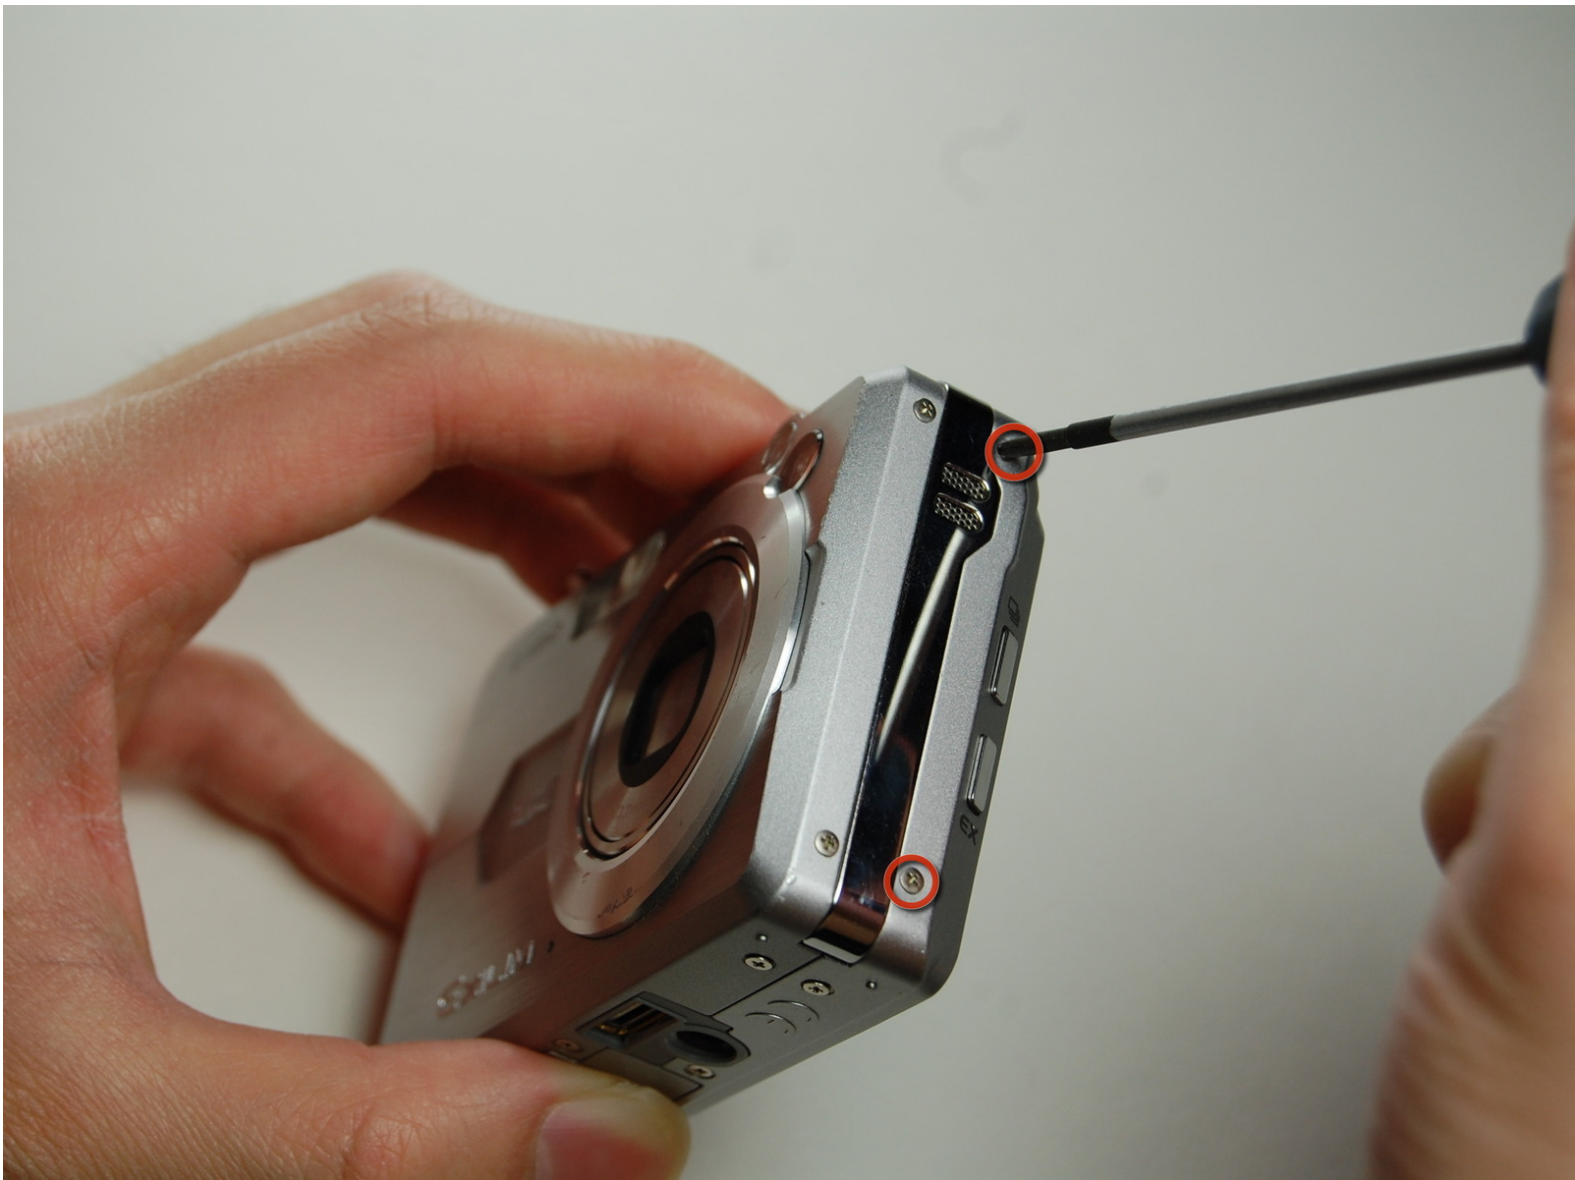

## INTRODUCTION

This guide will show you how to remove the LCD screen off the Casio Camera.



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [Anti-Static Project Tray](#) (1)
- [Tweezers](#) (1)



### PARTS:

- [replacement LCD screen](#) (1)
-

## Step 1 — LCD Screen

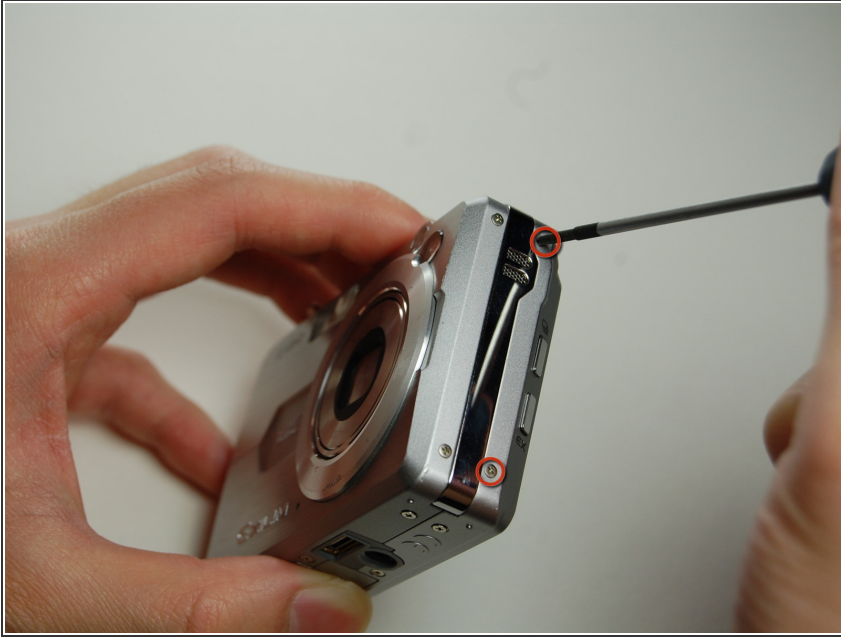

- Remove the side two screws on the side with the speaker, on the portion of the camera that is part of the back casing.
- Label screws (where they came from and what step) and set aside in sorting tray.

## Step 2




- Remove the two back screws on the bottom of the camera, on the same side as the LCD screen.

⚠ Note: Bottom screws are longer than the top ones, so label accordingly for ease in reassembly. (See attached picture.)



### Step 3

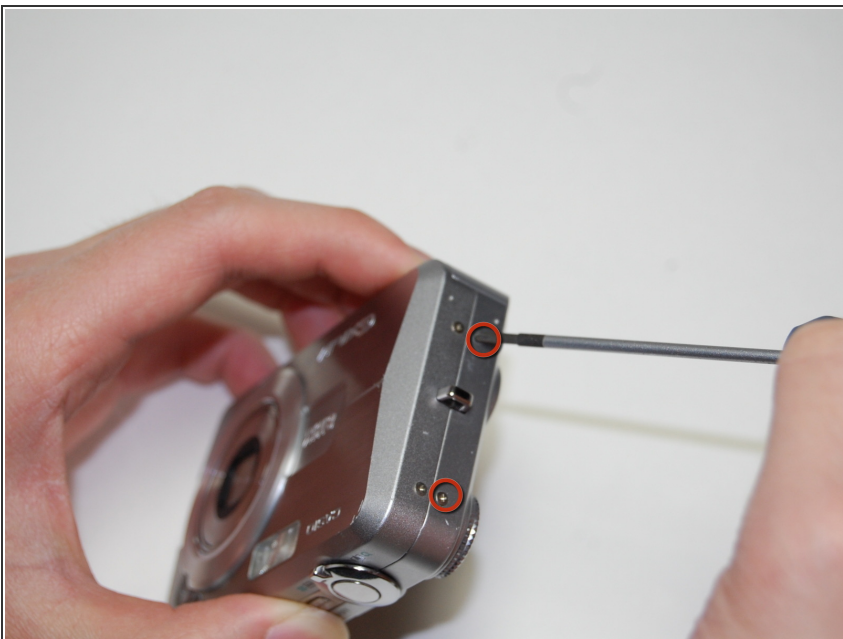

- Remove screws on the side opposite of the speaker.
- Label accordingly and add to sorting tray.


### Step 4



- Once all screws have been removed, gently pry open bottom casing.
- With tweezers, carefully remove ribbon from LCD screen- NOT from the back casing itself.
- Set bottom casing aside.

⚠ Navigation button may fall out. Be cautious of this and set aside if needed.


## Step 5

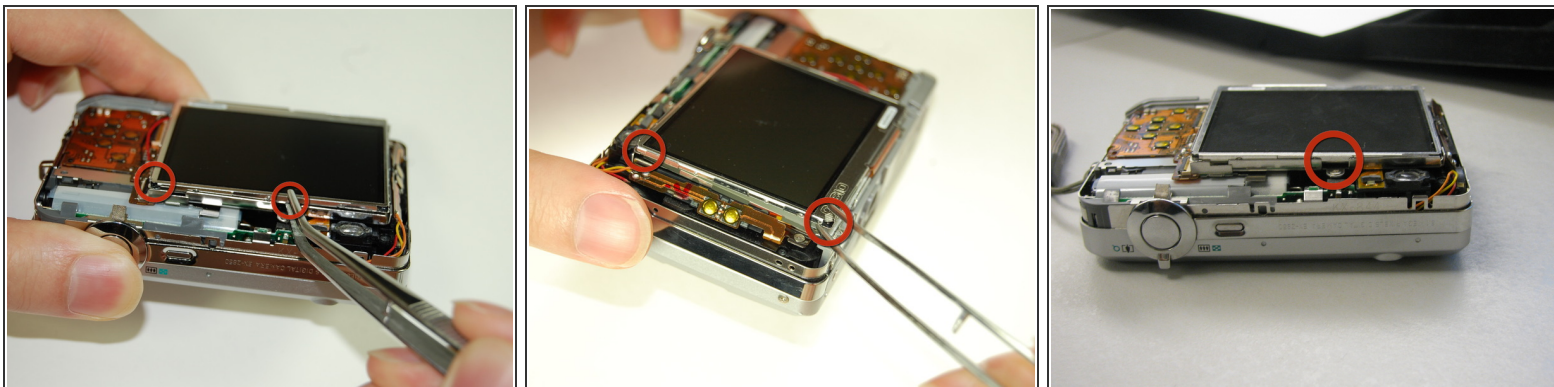

- Use tweezers or prongs to pry LCD screen off from openings.

⚠ There is a ribbon attached to the screen. Be sure not to pull this ribbon off the screen.




## Step 6

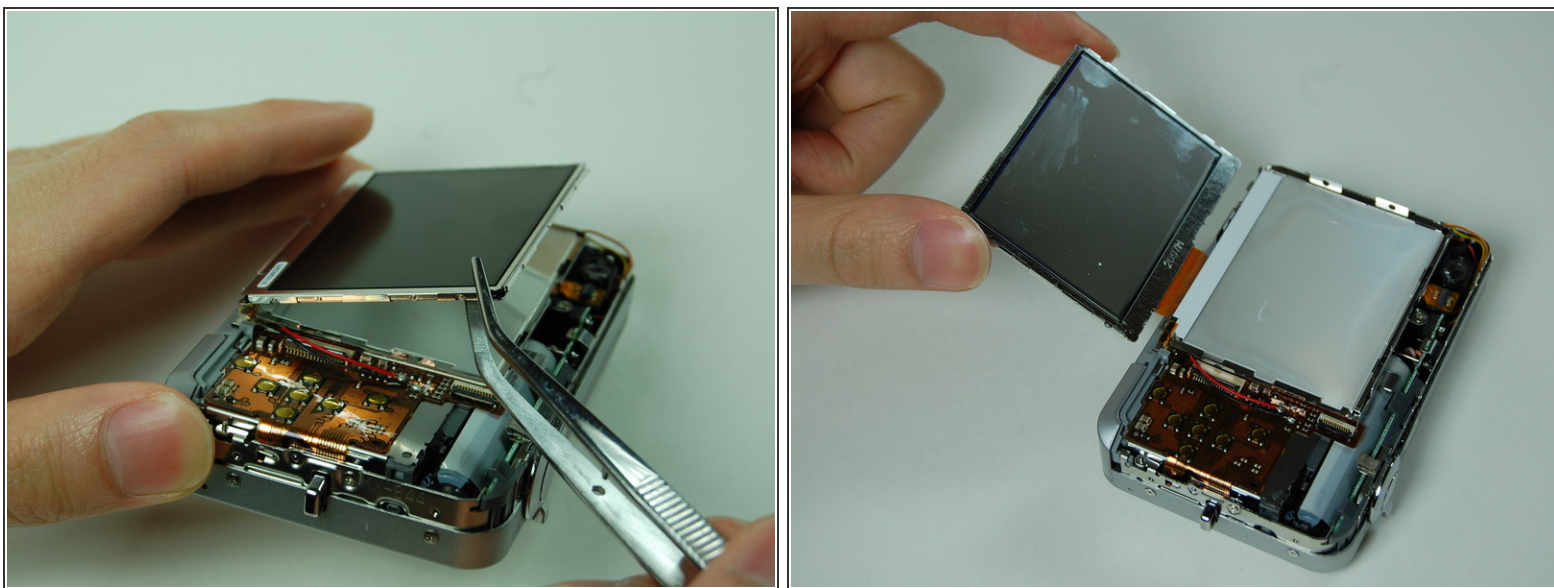

- Lift up LCD screen.
  - Slowly move it to the other side.
- i** Be sure to be very gentle with the LCD screen.






## Step 7

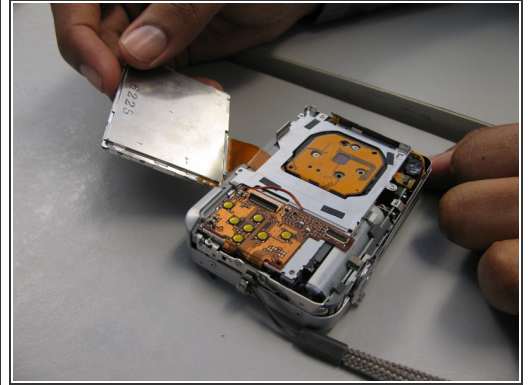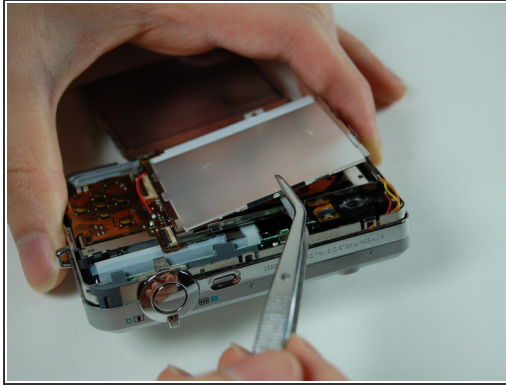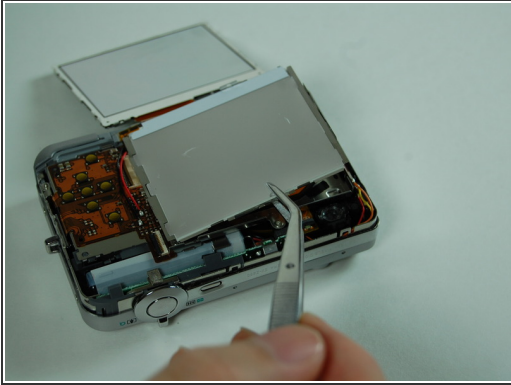

- Under the LCD screen you will see an LCD casing. You will want to GENTLY pry this off using tweezers.

**i** The casing may possibly be attached to LCD screen. If so, leave attached to screen.



## Step 8

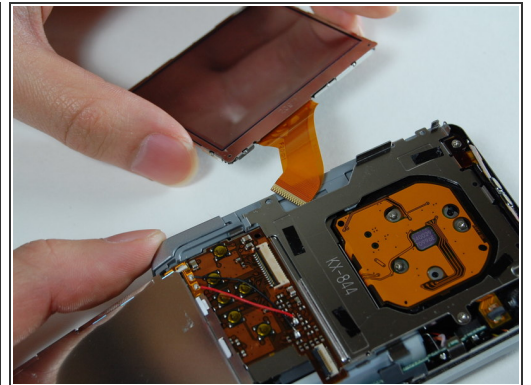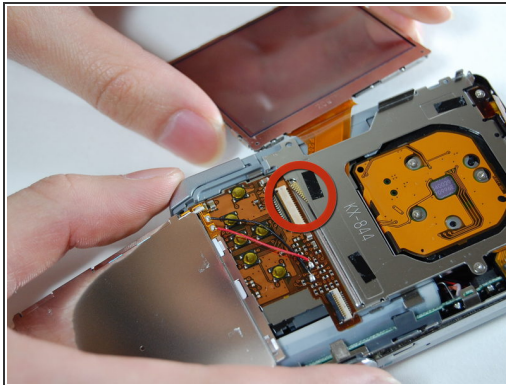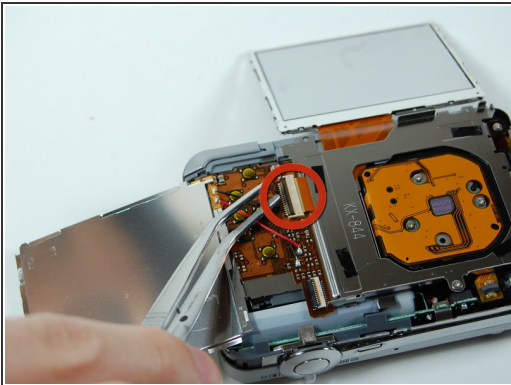

- Flip open the connector holding the ribbon.
- Pull out the LCD screen with the ribbon from the camera.


**!** THIS STEP IS ONE WHERE YOU SHOULD USE CAUTION AND BE VERY GENTLE!

## Step 9

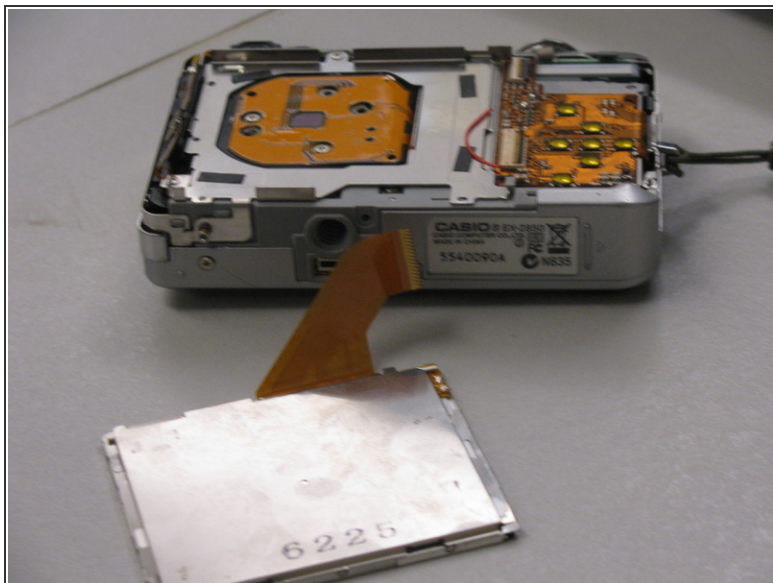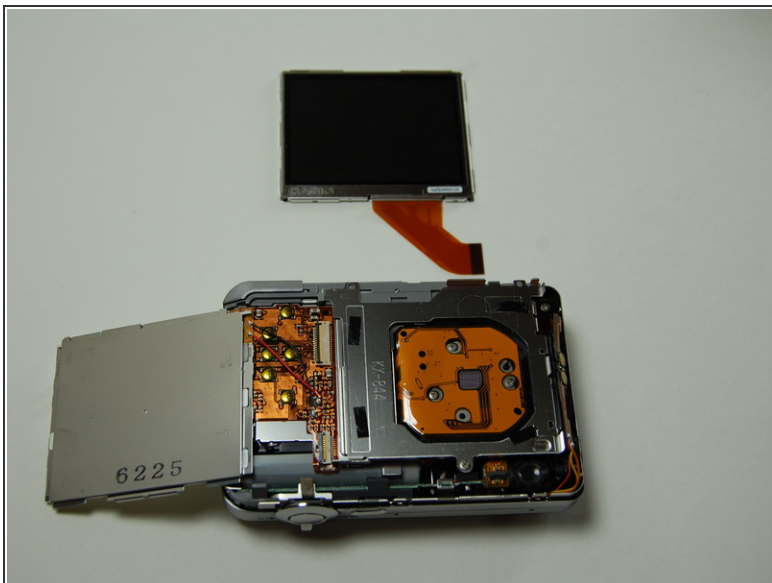

- Your LCD screen is now detached.
- Locate your replacement screen that you will now attach.

## Step 10

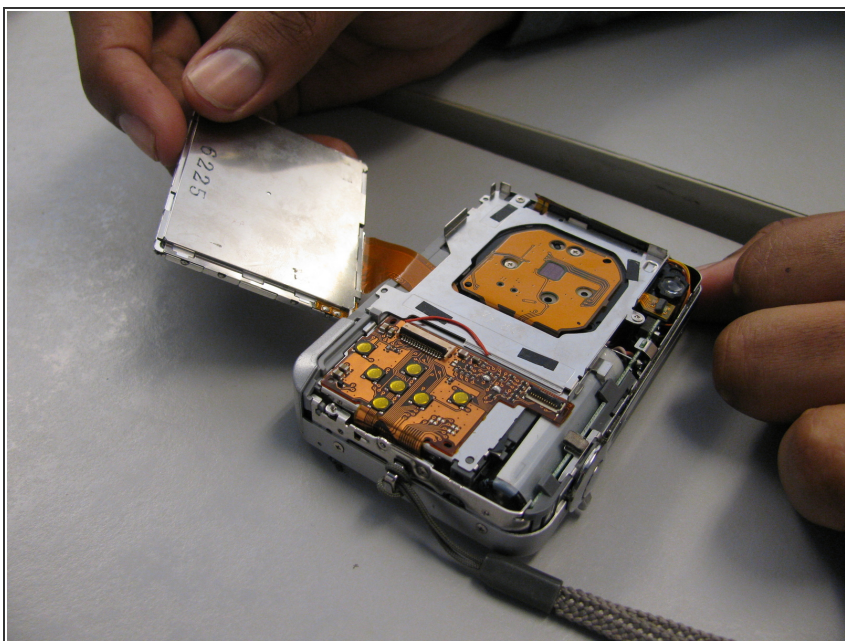

- Reconnect LCD ribbon to connector and flip back down.
- Ribbon should be inserted straight in and to the right side.




## Step 11



- Reattach LCD casing.
- Flip back over into place.

## Step 12


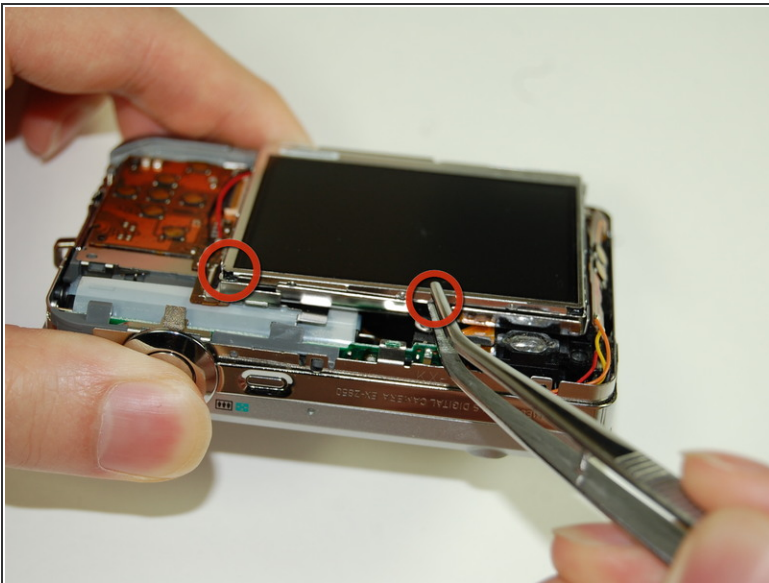


- Make sure LCD screen is firmly connected to camera.

**i** You may hear a click.



## Step 13

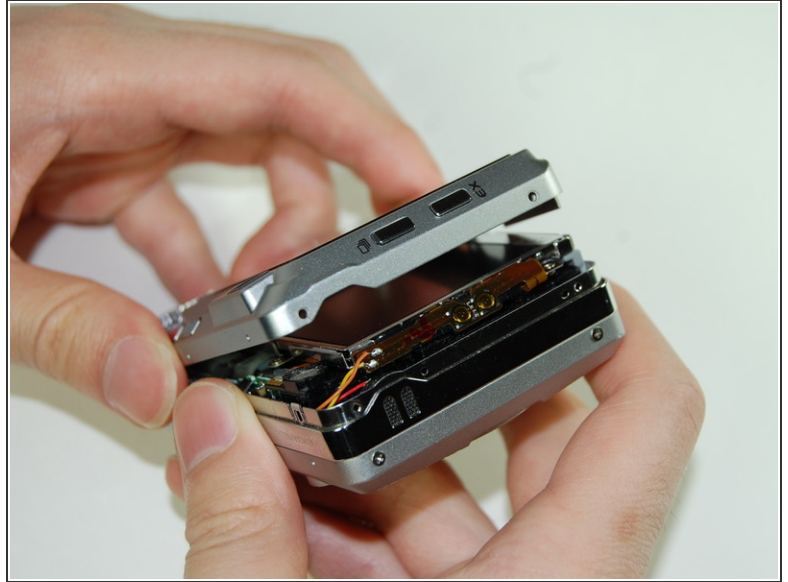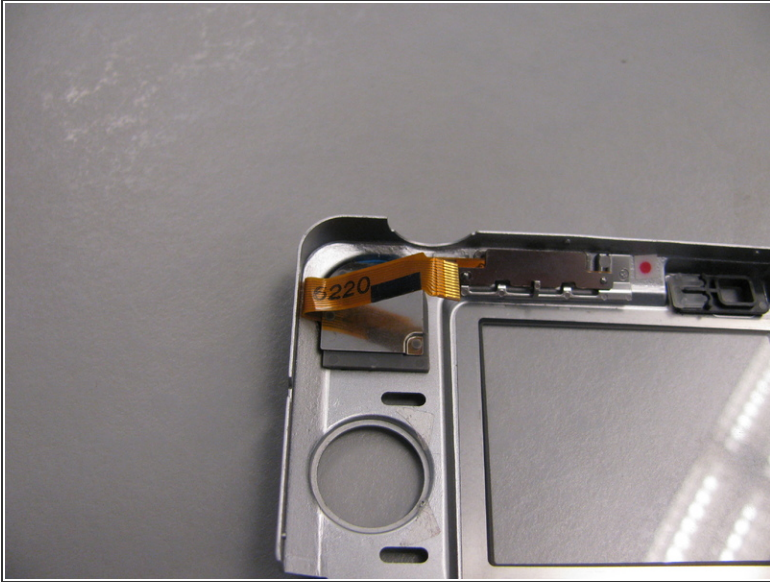


- Reattach the back casing as well as the small ribbon with it to the camera body.
- Be careful reattaching the case. Using tweezers might help.

## Step 14



- Locate labeled screws from Step 2- bottom of the camera.
- These are the longer screws. Screw them back in.
- ⓘ The picture shown does not show the right screw removed and ready to be replaced due to an issue with this specific camera.

## Step 15

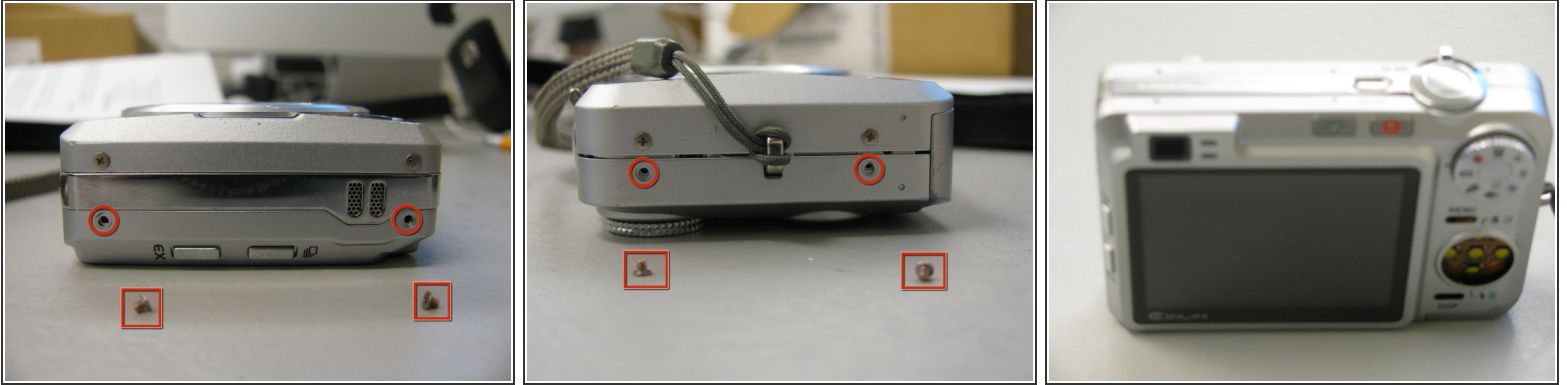

- Locate labeled screws from Step 1 and Step 3-side of the camera.
- These are the shorter screws. Screw them back in.
- Congratulations! Your camera has been reassembled.

By now you should have been able to get your Casio Exilim EX-Z850 camera's LCD screen functioning.

This document was last generated on 2017-06-21 07:18:47 PM.